GDO-12 HiRO

High Rolling Door Opener

Instruction Manual

(Instruction d'Installation)

Conforms to:
ANSI/CAN/UL325
Tested to comply
with Part 15 of the
FCC Rules

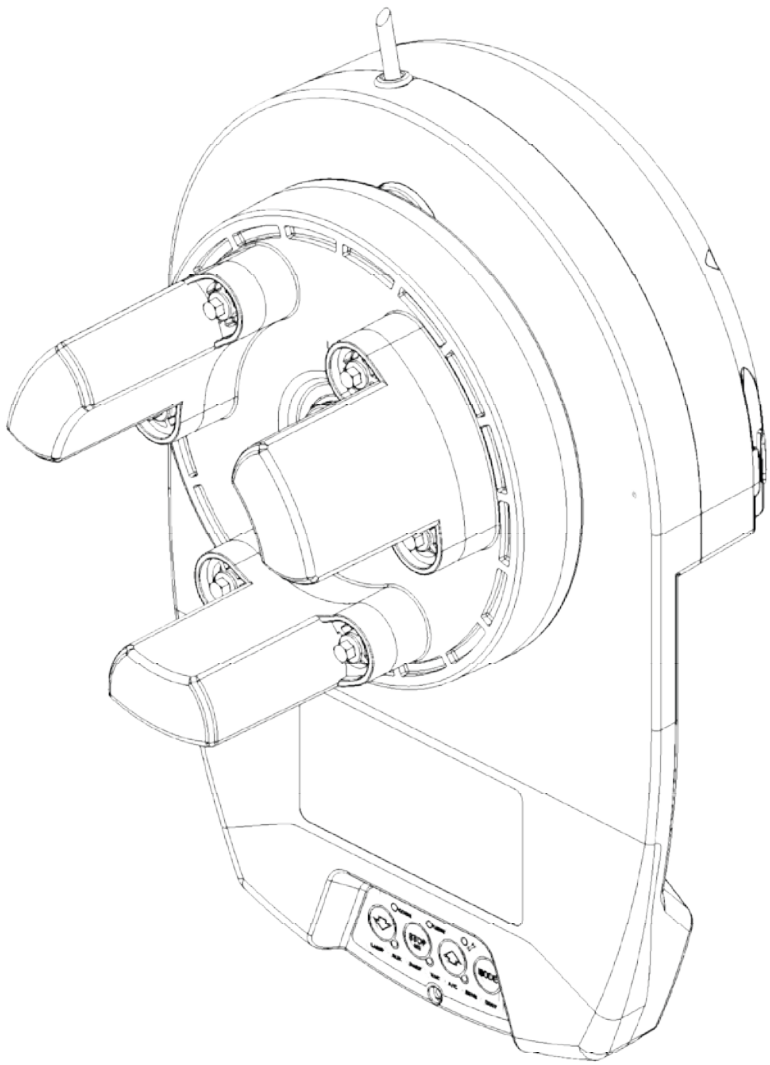

MODEL: GDO-12V1AM

FOR USE WITH EITHER RESIDENTIAL OR LIGHT-DUTY COMMERCIAL DOORS

Doc # 160492_01
Part # 100629
Released 20/12/22

automatic TECHNOLOGY

GDO-12 HiRO

High Roll Up Garage Door Opener

Contents

1. System Specifications 3
2. Safety Information 4
3. Sécurité 5
4. Kit Contents 6
5. Operator Safety & Security 7
   - 5.1 Your Door CAN NOT be used by the opener when: 7
   - 5.2 Your Door CAN be used when: 7
   - 5.3 To Disengage the Opener: 7
   - 5.4 To Re-Engage the Opener: 7
6. Installation Instructions 8
6.1 Pre-Installation Requirements 9
   - 6.1.1 Door Operation 9
   - 6.1.2 Unsuitable Door Types 9
   - 6.1.3 Position 9
   - 6.1.4 Power Supply 9
   - 6.1.5 Sideroom 9
   - 6.1.6 Forks 9

6.2 Door Preparation 10
   - 6.2.1 Preparation 10
   - 6.2.2 Pinning the Door to the drum: 10
   - 6.2.3 Door prop preparation 10

6.3 Fitting the Opener 11
6.4 Safety Beam Installation 12
   - 6.4.1 Safety Infra-Red Beam Kit (P/N 62047) 12
   - 6.4.2 Assembling the Mounting Bracket 12
   - 6.4.3 Aligning the Transmitter and receiver 12

6.5 Setting Speed and Limits 13
   - 6.5.1 Set the Limit Positions and adjust drive speed: 13
   - 6.5.2 Clearing the Door Limit Positions 14
   - 6.5.3 Re-profiling the Door 14

6.6 Auto-Close 14
6.7 Safety Testing & Accessories 15
   - 6.7.1 Testing the Close Cycle 15
   - 6.7.2 Testing the Open Cycle 15
   - 6.7.3 Installation of Premium Wall Control 15

6.8 Coding Transmitters 16
   - 6.8.1 Remote Control Transmitter Button to Operate Door 17
   - 6.8.2 Erasing Programmed Codes 17
   - 6.8.3 Selecting The Function To Be Coded 17
   - 6.8.4 Installing a wall button control 17

6.9 Attach Warning Labels 18
7. Operation Instructions 19
7.1 How to Use Your Operator 20
   - 7.1.1 To Operate the opener: 20
   - 7.1.2 Replacing the Battery: 3V Lithium Battery CR2032. 20

7.2 User Operating Controls 21
7.3 Door Status Indicators 21
7.4 Disposal of Batteries 22
8. User Maintenance Instruction 23
   - 8.1 Door Maintenance 23
   - 8.2 If You Need a Service Call 23

9. Troubleshooting 24
10. Appendix 25
   - A - Adjustment Mode Parameters 25
   - B - Setting the PET Mode position 26
   - C - LED Status 26
   - D - Setting Limits via Transmitter 27
   - E - Additional Remote Control Functions 28